



OBSERVATION/ MAINTENANCE PORT

PORT USED FOR INSPECTION PURPOSES AND FOR SYSTEM MAINTENANCE AS REQUIRED. WATER SHALL BE PUMPED INTO THE SYSTEM AND RESPEND ACCUMULATED SEDIMENT. MINIMUM REQUIRED MAINTENANCE INCLUDES A QUARTERLY INSPECTION FOR THE FIRST YEAR OF OPERATION AND A YEARLY INSPECTION THEREAFTER FLUSH AS NEEDED.

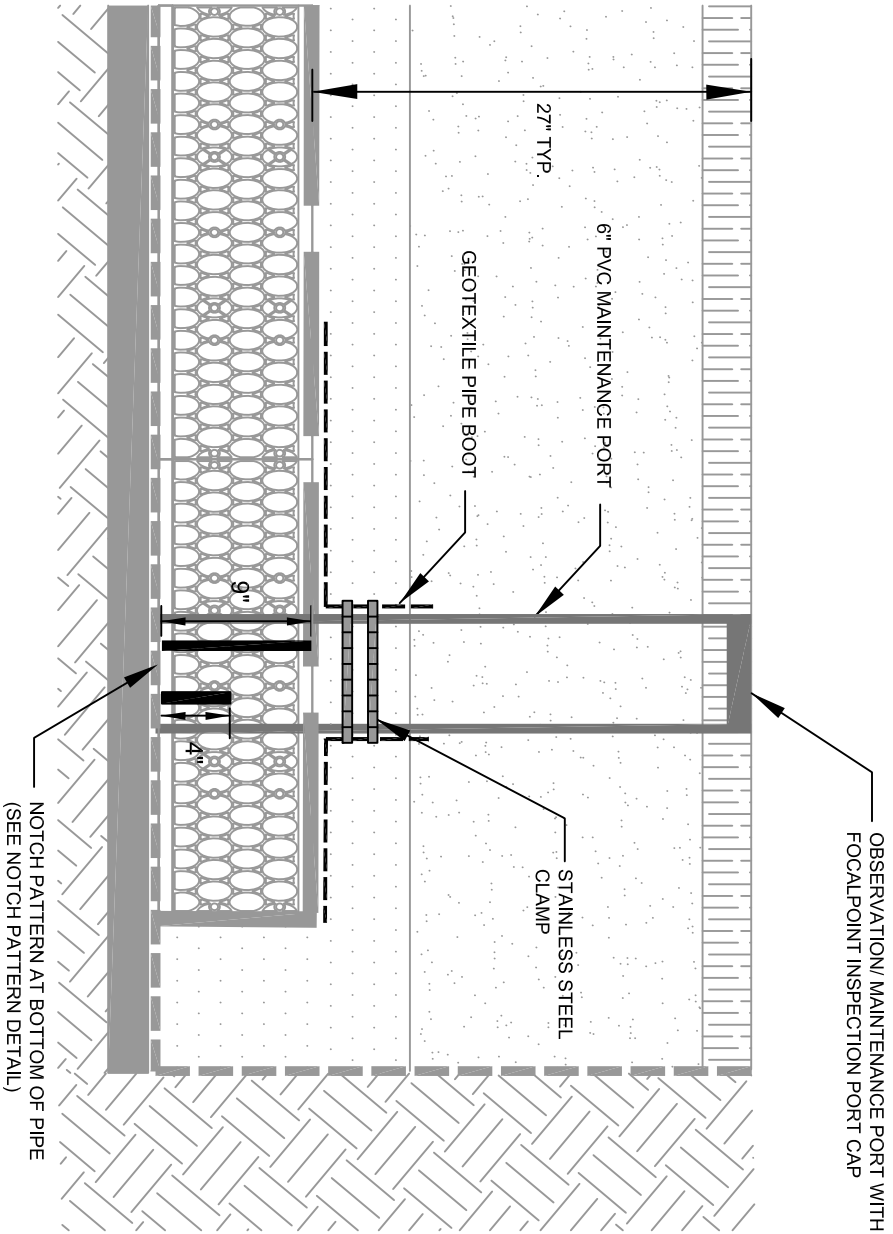

PIPE NOTCH PATTERN DETAIL

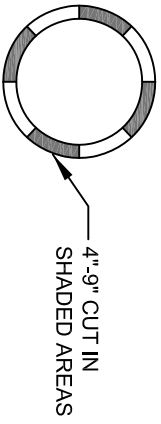

FOCALPOINT OBSERVATION/ MAINTENANCE PORT

FOR MORE INFORMATION CONTACT ACF ENVIRONMENTAL
WWW.ACFENVIRONMENTAL.COM
 800.448.3636



REVISED
 MARCH 2015